


Pushing the buttons on the microwave remote box is the same as pushing the matching button on the microwave front panel itself

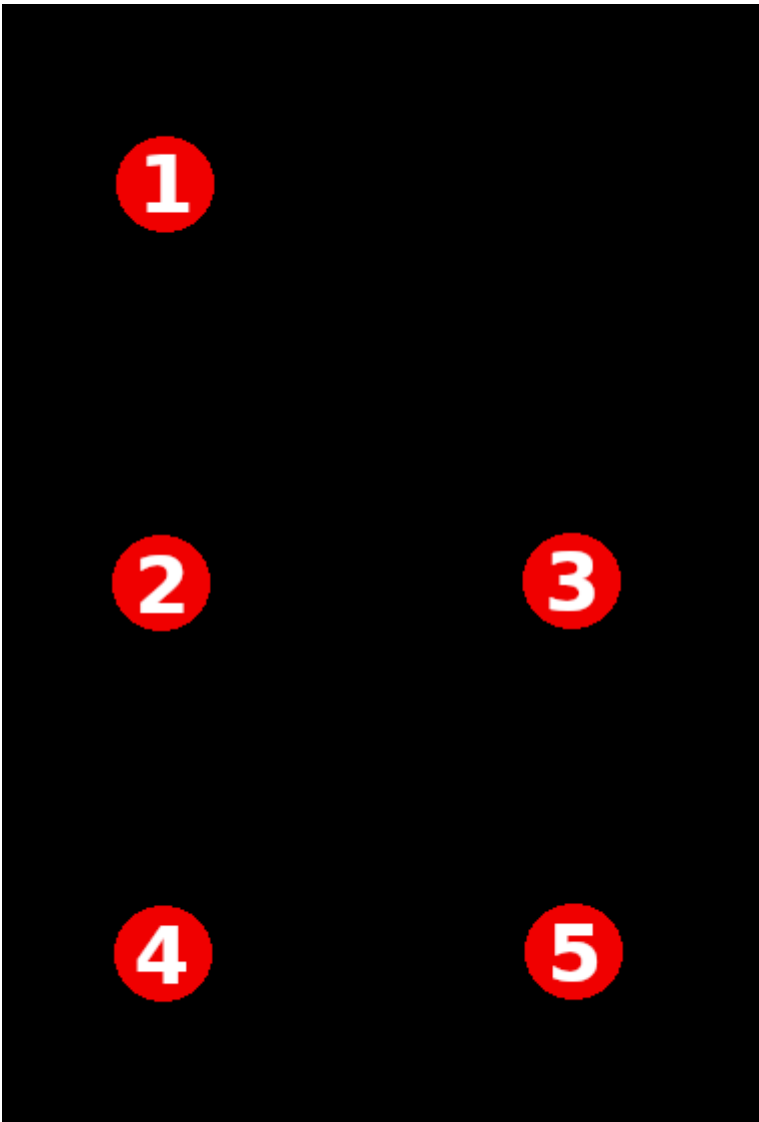

1. Timer mode
2. + 1 minute
3. + 10 seconds
4. Stop / Cancel / Reset
5. Start (cooking or timer)